

# **DYNPICOORDS system variable**

1533 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1193

## **Function Description:**

The **DYNPICOORDS** system variable is used to control to use relative coordinate format or absolute coordinate format when using pointer input.

**Type** : Parameter

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## **System Variable Value:**

**0** : relative

**1** : absolute

Online URL: <https://www.gstarcad.com.my/knowledge/article/dynpicoords-system-variable-1533.html>