

DYNPIFORMAT system variable

1534 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1072

Function Description:

The **DYNPIFORMAT** system variable is used to control whether pointer input use polar or Cartesian format for coordinates.

Type : Parameter

Saved in : Registry

Initial value : 0

Range : 0,1

This setting is only suitable for the second or next point.

System Variable Value:

0: polar

1: Cartesian

Online URL: <https://www.gstarcad.com.my/knowledge/article/dynpiformat-system-variable-1534.html>