

DYNPIVIS system variable

1535 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 940

Function Description:

The **DYNPIVIS** system variable is used to control when to display pointer input.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1,2

System Variable Value:

0 : The DYNPIVIS system variable is used to control when to display pointer input.

1 : The DYNPIVIS system variable is used to control when to display pointer input.

2 : always

The **DYNMODE** system variable turns dynamic input on and off.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dynpivis-system-variable-1535.html>