

## **DYNPROMPT system variable**

1536 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1010

### **Function Description:**

The **DYNPROMPT** system variable is used to control the display of prompts in dynamic input.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

0 :Off

1 : On

The **DYNMODE** system variable turns dynamic input on and off. If specified **DYNMODE** to be 0, it does not display prompts no matter how to set the **DYNPROMPT** system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dynprompt-system-variable-1536.html>