

DYNTOOLTIPS system variable

1537 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1080

Function Description:

The **DYNTOOLTIPS** system variable is used to control the tooltips which are affected by tooltip appearance settings.

Type : Parameter

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 :only dynamic input value fields

1 : all drafting tooltips

Online URL: <https://www.gstarcad.com.my/knowledge/article/dyntooltips-system-variable-1537.html>