

ELEVATION system variable

1539 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 868

Function Description:

The **ELEVATION** system variable is used to store the elevation in current UCS for new objects.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/elevation-system-variable-1539.html>