

## **ELEVATION system variable**

1539 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 890

### **Function Description:**

The **ELEVATION** system variable is used to store the elevation in current UCS for new objects.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/elevation-system-variable-1539.html>