

## **ERRNO system variable**

1541 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1045

### **Function Description:**

The **ERRNO** system variable is used to display corresponding error numbers when detected errors leading by loading LISP functions.

(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

Users could use **ERRNO** command by **GETVAR** command to check the current value of **ERRNO**. The **ERRNO** system variable is not always zero. It is suppressed zero when starting or opening a drawing.

Online URL: <https://www.gstarcad.com.my/knowledge/article/errno-system-variable-1541.html>