

## **ERSTATE system variable**

1542 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 905

### **Function Description:**

The **ERSTATE** system variable is used to indicate the "External Reference" palettes turns on or off.  
(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : Unknown

**Range** : 0,1

### **System Variable Value:**

**0** :Off

**1** :On

Online URL: <https://www.gstarcad.com.my/knowledge/article/erstate-system-variable-1542.html>