

ERSTATE system variable

1542 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 928

Function Description:

The **ERSTATE** system variable is used to indicate the "External Reference" palettes turns on or off.
(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : Unknown

Range : 0,1

System Variable Value:

0 :Off

1 :On

Online URL: <https://www.gstarcad.com.my/knowledge/article/erstate-system-variable-1542.html>