

## **EXPLMODE system variable**

1544 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 892

### **Function Description:**

The **EXPLMODE** system variable is used to control whether the EXPLODE command supports non-uniformly scaled blocks.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : do not explode non-uniformly scaled blocks

**1** : explode non-uniformly scaled blocks

Online URL: <https://www.gstarcad.com.my/knowledge/article/explmode-system-variable-1544.html>