

EXPLMODE system variable

1544 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 885

Function Description:

The **EXPLMODE** system variable is used to control whether the EXPLODE command supports non-uniformly scaled blocks.

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not explode non-uniformly scaled blocks

1 : explode non-uniformly scaled blocks

Online URL: <https://www.gstarcad.com.my/knowledge/article/explmode-system-variable-1544.html>