

# **EXPORTEPLOTFORMAT system variable**

1545 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 985

## **Function Description:**

The **EXPORTEPLOTFORMAT** system variable is used to set the default export format for electronic files: PDF, DWF or DWFx.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 2

**Range** : 0,1,2

## **System Variable Value:**

**0** :PDF

**1** : DWF

**2** :DWFx

Online URL:

<https://www.gstarcad.com.my/knowledge/article/exporteplotformat-system-variable-1545.html>