

EXPORTEPLOTFORMAT system variable

1545 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1001

Function Description:

The **EXPORTEPLOTFORMAT** system variable is used to set the default export format for electronic files: PDF, DWF or DWFx.

Type : Integer

Saved in : User-settings

Initial value : 2

Range : 0,1,2

System Variable Value:

0 :PDF

1 : DWF

2 :DWFx

Online URL:

<https://www.gstarcad.com.my/knowledge/article/exporteplotformat-system-variable-1545.html>