

EXPORTMODELSPACE system variable

1546 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1045

Function Description:

The **EXPORTMODELSPACE** system variable is used to specify which part of drawing in model space to export to a DWF, DWFx or PDF file.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 :display

1 :extent

2 :window

Online URL:

<https://www.gstarcad.com.my/knowledge/article/exportmodelspace-system-variable-1546.html>