

## **EXPORTMODELSPACE system variable**

1546 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1048

### **Function Description:**

The **EXPORTMODELSPACE** system variable is used to specify which part of drawing in model space to export to a DWF, DWFx or PDF file.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### **System Variable Value:**

**0** :display

**1** :extent

**2** :window

Online URL:

<https://www.gstarcad.com.my/knowledge/article/exportmodelspace-system-variable-1546.html>