

## **EXPORTPAGESETUP system variable**

1547 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1176

### **Function Description:**

The **EXPORTPAGESETUP** system variable is used to specify whether to export to a DWF, DWFx or PDF file according to current page setup.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : current, export to a file according to current page setup

**1** : override, export to a file and allow users override DWG by current page setup.

Uses can override plot options such as page size and orientation in the Page Setup Override dialog box.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/exportpagesetup-system-variable-1547.html>