

## **EXPORTPAPERSPACE system variable**

1548 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 892

### **Function Description:**

The **EXPORTPAPERSPACE** system variable is used to specify which part of drawing in layout space to export to a DWF, DWFx or PDF file.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### **System Variable Value:**

**0** : display

**1** : extent

**2** : window

Online URL:

<https://www.gstarcad.com.my/knowledge/article/exportpaperspace-system-variable-1548.html>