

EXTMIN system variable

1550 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 747

Function Description:

The **EXTMIN** system variable is used to store the value of left-bottom corner point in the drawing extents.

(Read-Only)

Type : 3D point

Saved in : Drawing

Initial value : Unknown

If some new objects created outside of limits, users could use "**All**" or "**Extent**" option of **ZOOM** command to scale objects to new extents.

The **EXTMIN** system variable value is the world coordinate value in current space

Online URL: <https://www.gstarcad.com.my/knowledge/article/extmin-system-variable-1550.html>