

## **FACETERMAXEDGELENGTH system variable**

1555 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 930

### **Function Description:**

The **FACETERMAXEDGELENGTH** system variable is used to set the maximum length of mesh object edge when converting from solids or surfaces to mesh objects.

**Type :** Real

**Saved in :** User-settings

**Initial value :** 0.0000

The **FACETERMAXEDGELENGTH** system variable could be a any non-negative, including 0.

Note: this system variable reflects the absolute value of objects whose smoothness is zero.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/facetermaxedgelenhth-system-variable-1555.html>