

## **FACETERMAXGRID system variable**

1556 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 945

### **Function Description:**

The **FACETERMAXGRID** system variable is used to set internal parameter.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 4096

**Range** : 0 ~ 4096

Note: this system variable reflects the absolute value of objects whose smoothness is zero.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/facetermaxgrid-system-variable-1556.html>