

FACETERMESHTYPE system variable

1557 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1053

Function Description:

The **FACETERMESHTYPE** system variable is used to set type for new meshes.

Type : Integer

Saved in : User-settings

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : convert objects to optimized mesh objects with fewer faces

1 : convert objects to faces, most of them are quadrilaterals

2 : convert objects to faces, most of them are triangles

Online URL:

<https://www.gstarcad.com.my/knowledge/article/facetermeshtype-system-variable-1557.html>