

FACETERPRIMITIVEMODE system variable

1560 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1059

Function Description:

The **FACETERPRIMITIVEMODE** system variable is used to specifies whether smoothness settings for objects that are converted to mesh are derived from the Mesh Tessellation Options or the Mesh Primitive Options dialog box.

Type : Bitcode

Saved in : User-settings

Initial value : 1

Range : 0,1

System Variable Value:

0 : apply the settings in mesh tessellation dialog box to converted objects

1 : apply the settings in mesh primitive dialog box to converted objects

Online URL:

<https://www.gstarcad.com.my/knowledge/article/faceterprimitivemode-system-variable-1560.html>