

FACETERSMOOTHLEV system variable

1561 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 927

Function Description:

The **FACETERSMOOTHLEV** system variable is used to set the default smooth level for converted mesh objects.

Type : Integer

Saved in : User-settings

Initial value : 1

System Variable Value:

-1 : or any negative: please do not smooth objects after converting

0 : please do not smooth objects after converting

1 : apply smooth level 1 after converting

2 : apply smooth level 2 after converting

3 : apply smooth level 3 after converting

This system variable must be smaller than **SMOOTHMESHMAXLEV**.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/facetersmoothlev-system-variable-1561.html>