

## **FACETERSMOOTHLEV system variable**

1561 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 937

### **Function Description:**

The **FACETERSMOOTHLEV** system variable is used to set the default smooth level for converted mesh objects.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 1

### **System Variable Value:**

**-1** : or any negative: please do not smooth objects after converting

**0** : please do not smooth objects after converting

**1** : apply smooth level 1 after converting

**2** : apply smooth level 2 after converting

**3** : apply smooth level 3 after converting

This system variable must be smaller than **SMOOTHMESHMAXLEV**.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/facetersmoothlev-system-variable-1561.html>