

## **FACETRES system variable**

1563 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1182

### **Function Description:**

The **FACETRES** system variable is used to adjust objects smooth level after shaded or rendered, or deleted hidden lines.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.5000

**Range** : 0.01 ~ 10.0

In the aspect of precious of publishing **3DDWF** files, the **3DDWFPREC** system variable could instead **FACETRES** system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/facetres-system-variable-1563.html>