

FACETRES system variable

1563 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1185

Function Description:

The **FACETRES** system variable is used to adjust objects smooth level after shaded or rendered, or deleted hidden lines.

Type : Real

Saved in : Drawing

Initial value : 0.5000

Range : 0.01 ~ 10.0

In the aspect of precious of publishing **3DDWF** files, the **3DDWFPREC** system variable could instead **FACETRES** system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/facetres-system-variable-1563.html>