

## **FIELDDISPLAY system variable**

1564 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1132

### **Function Description:**

The **FIELDDISPLAY** system variable is used to control whether to display field with gray background.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

Do not to plot background.

### **System Variable Value:**

**0** : display field without background

**1** : display field with gray background

Online URL: <https://www.gstarcad.com.my/knowledge/article/fielddisplay-system-variable-1564.html>