

## **FILLMODE system variable**

1568 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 898

### **Function Description:**

The **FILLMODE** system variable is used to specify whether to fill hatches and fills, 2D solids, and wide polylines.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : do not fill objects

**1** : fill objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/fillmode-system-variable-1568.html>