

FRAME system variable

1571 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1112

Function Description:

The **FRAME** system variable is used to control how to display the frame for all images, underlays, and clipped xrefs.

Type : Integer

Saved in : Drawing

Initial value : 3

Range : 0,1,2,3

If the value of **FRAME** system variable changed, the **IMAGEFRAME**, **DWFFRAME**, **PDFFRAME**, **DGNFRAME**, and **XCLIPFRAME** settings are changed to match the value of **FRAME**.

System Variable Value:

0 : do not display and plot frame

Temporarily display frame when selecting or previewing objects

1 : display and plot frame

2 : display the frame, but do not to plot it

3 : display the frame, but do not to plot it

Note: only when the frame settings for a certain object is different from other objects, the settings of **FRAME** restore to 3.

Online URL: <https://www.gstarcad.com.my/knowledge/article/frame-system-variable-1571.html>