

FRONTZ system variable

1572 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 872

Function Description:

The **FRONTZ** system variable is used to store the offset from current front clipped plane to target plane in drawing units.

(Read-Only)

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/frontz-system-variable-1572.html>