

FULLPLOTPATH system variable

1574 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1055

Function Description:

The **FULLPLOTPATH** system variable is used to control whether send the full path of drawing files to background plot or not.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 :only send drawing file name

1 : send full path of drawing file

Online URL: <https://www.gstarcad.com.my/knowledge/article/fullplotpath-system-variable-1574.html>