

## **GCADPREFIX system variable**

1575 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1027

### **Function Description:**

The **GCADPREFIX** system variable is used to save directory path (if exists) specified by **GCAD** environment variable and attached with path separator if necessary.

(Read only)

**Type** : Strings

**Saved in** : Not saved

**Initial value** : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/gcadprefix-system-variable-1575.html>