

## **GFCLRSTATE system variable**

1581 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 937

### **Function Description:**

The **GFCLRSTATE** system variable is used to specify to use single color or double colors for gradient fill.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : double colors for gradient fill

**1** : single color for gradient fill

Online URL: <https://www.gstarcad.com.my/knowledge/article/gfclrstate-system-variable-1581.html>