

GFSHIFT system variable

1583 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 964

Function Description:

The **GFSHIFT** system variable is used to specify the justification of gradient fill pattern, center, top or left shifted.

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 :center

1 :shift up and left

Online URL: <https://www.gstarcad.com.my/knowledge/article/gfshift-system-variable-1583.html>