

GLOBALOPACITY system variable

1584 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 770

Function Description:

The **GLOBALOPACITY** system variable is used to set the global opacity level for all palettes.

Type : Integer

Saved in : Registry

Initial value : 100

Range : 0 ~ 100

System Variable Value:

0 : completely transparency

100 : completely opacity

Online URL: <https://www.gstarcad.com.my/knowledge/article/globalopacity-system-variable-1584.html>