

## **GRIDMAJOR system variable**

1586 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 912

### **Function Description:**

The **GRIDMAJOR** system variable is used to set the frequency of major grid lines compared to minor grid lines.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 5

**Range** : 1 ~ 100

Online URL: <https://www.gstarcad.com.my/knowledge/article/gridmajor-system-variable-1586.html>