

GRIDMODE system variable

1587 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1031

Function Description:

The **GRIDMODE** system variable is used to specify the grid mode is on or off.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : off

100 : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/gridmode-system-variable-1587.html>