

GRIDSTYLE system variable

1588 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 987

Function Description:

The **GRIDSTYLE** system variable is used to control the grid display as points or lines.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0 ~ 7

System Variable Value:

0 : display as grid lines for model space, block editor, drawing and paper space in layout

1 : display as points for model space

2 : display as points for block editor

4 : display as points for drawing and paper space in layout

Online URL: <https://www.gstarcad.com.my/knowledge/article/gridstyle-system-variable-1588.html>