

## **GRIDUNIT system variable**

1589 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1113

### **Function Description:**

The **GRIDUNIT** system variable is used to specify the grid space (in X and Y directions) in current viewport.

**Type** : 2D point

**Saved in** : Drawing

**Initial value** : (0.5000,0.5000)(Imperial) or (10,10)(Metric)

To specify the default grid space to be snap space, please set the GRIDUNIT to be 0.0. All changes will display in grid after regenerating view.

Online URL: <https://www.gstarcad.com.my/knowledge/article/gridunit-system-variable-1589.html>