

## **GRIPBLOCK system variable**

1590 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1010

### **Function Description:**

The **GRIPBLOCK** system variable is used to control the display of grips in blocks.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : only specify grids for insertion points of block

**1** : specify grids for insertion objects of block

Online URL: <https://www.gstarcad.com.my/knowledge/article/gripblock-system-variable-1590.html>