

GRIPBLOCK system variable

1590 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1003

Function Description:

The **GRIPBLOCK** system variable is used to control the display of grips in blocks.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : only specify grids for insertion points of block

1 : specify grids for insertion objects of block

Online URL: <https://www.gstarcad.com.my/knowledge/article/gripblock-system-variable-1590.html>