

GRIPOBJLIMIT system variable

1597 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1153

Function Description:

The **GRIPOBJLIMIT** system variable is used to hide the display of grips when selected more objects in selection than specified quantity.

Type : Integer

Saved in : Registry

Initial value : 100

Range : 0 ~ 32767

Note: if the **GRIPBLOCK** system variable has specified to be 1 and selected more objects than specified, the block only displays the insertion point grip, rather than all grips of objects in the block.

Online URL: <https://www.gstarcad.com.my/knowledge/article/gripobjlimit-system-variable-1597.html>