

## **GRIPOBJLIMIT system variable**

1597 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1132

### **Function Description:**

The **GRIPOBJLIMIT** system variable is used to hide the display of grips when selected more objects in selection than specified quantity.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 100

**Range** : 0 ~ 32767

Note: if the **GRIPBLOCK** system variable has specified to be 1 and selected more objects than specified, the block only displays the insertion point grip, rather than all grips of objects in the block.

Online URL: <https://www.gstarcad.com.my/knowledge/article/gripobjlimit-system-variable-1597.html>