

GRIPSIZE system variable

1599 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 955

Function Description:

The **GRIPSIZE** system variable is used to set the size of grip frame by pixels.

Type : Integer

Saved in : Registry

Initial value : 5

Range : 1 ~ 255

Online URL: <https://www.gstarcad.com.my/knowledge/article/gripsize-system-variable-1599.html>