

## **GRIPTIPS system variable**

1601 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1002

### **Function Description:**

The **GRIPTIPS** system variable is used to control the grip tips location when the cursor hovering on the grips supported dynamic blocks or grips of custom objects.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : turn grip tips off

**1** : turn grip tips on

Online URL: <https://www.gstarcad.com.my/knowledge/article/griptips-system-variable-1601.html>