

GRIPTIPS system variable

1601 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1007

Function Description:

The **GRIPTIPS** system variable is used to control the grip tips location when the cursor hovering on the grips supported dynamic blocks or grips of custom objects.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : turn grip tips off

1 : turn grip tips on

Online URL: <https://www.gstarcad.com.my/knowledge/article/griptips-system-variable-1601.html>