

# GTAUTO system variable

1602 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1269

## Function Description:

The **GTAUTO** system variable is used to control whether to display 3D gizmos when starting a command before selecting objects in 3D visual style viewport.

**Type :** Integer

**Saved in :** Registry

**Initial value :** 1

**Range :** 0,1

## System Variable Value:

**0** : gizmos do not display automatically when selecting objects before starting a command

**1** : gizmos display automatically after creating a selection set

The **GTAUTO** system variable could affect the display of gizmos of **3D MOVE**, **3D ROTATE**, and **3D SCALE**.

Online URL: <https://www.gstarcad.com.my/knowledge/article/gtauto-system-variable-1602.html>