

## **HALOGAP system variable**

1605 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1058

### **Function Description:**

The **HALOGAP** system variable is used to specify the gap when one objects hidden by another object.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

The value of **HALOGAP** system variable is specified by a percent of one unit and is independent of the zoom level.

Online URL: <https://www.gstarcad.com.my/knowledge/article/halogap-system-variable-1605.html>