

## **HANDLES system variable**

1606 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 986

### **Function Description:**

The **HANDLES** system variable is used to report whether object handles could be accessed by application programs.

(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : on

This system variable is only used to keep the integrity of scripts.

Online URL: <https://www.gstarcad.com.my/knowledge/article/handles-system-variable-1606.html>